

 
 


Game & Watch Shelf MEGA

USB CABLE ATTACHMENT INSTRUCTIONS

First, insert your Nintendo USB-C cable that came with your Game & Watch into the area marked **USB SLOT** in the image on the right. Ensure that the USB-C side of your cable is flush with the end that will connect to your Game & Watch.

Next, push your USB-C cable through the **GRIP** area. *This will be hard to do*, but is necessary to ensure that your USB-C cable does not move when you replace and remove your Game & Watch repeatedly. The cable has been set correctly when it is flush with the right side of the shelf.

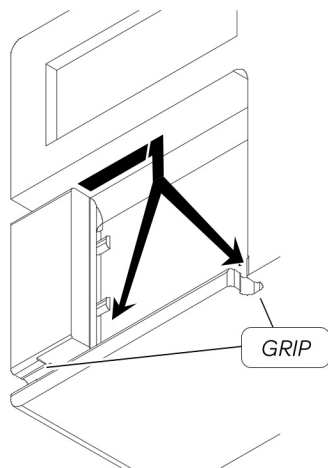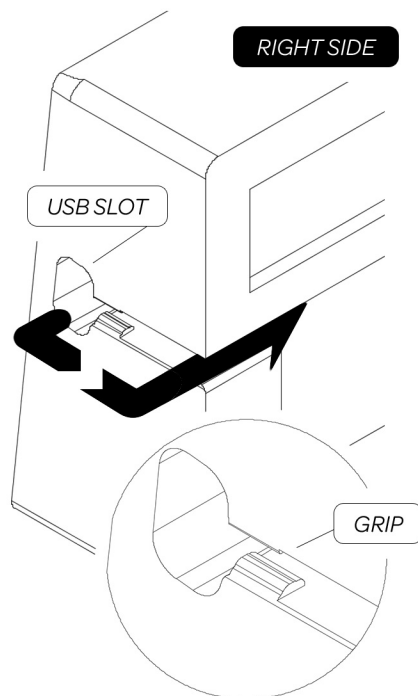

Lastly, pass your USB-C cable down and through one of the available **GRIPs**. One allows you to hang the other end of the USB cable straight down, while the other allows you to have the USB cable's other end available from the right side.

You can also use this open space to house a L-shaped USB connector so that you can have a completely cable-free appearance.


Take a moment to ensure that your Game & Watch can connect with the USB-C connector. If it isn't connecting, remove the USB-C cable and repeat these instructions again.

MOUNTING INSTRUCTIONS

Wipe the wall with rubbing alcohol — no household cleaners.

Press Command Strips onto the shelf, peel the wall-side backing, and press the shelf to the wall for 30 seconds. Pull the shelf off the strips and set it aside. Press firmly on the strips still on the wall to lock them in.

Wait one hour, then line up the shelf with the strips and press until you hear the velcro click. Attach your USB cable, slide your Game & Watch in, and connect it to the USB-C.

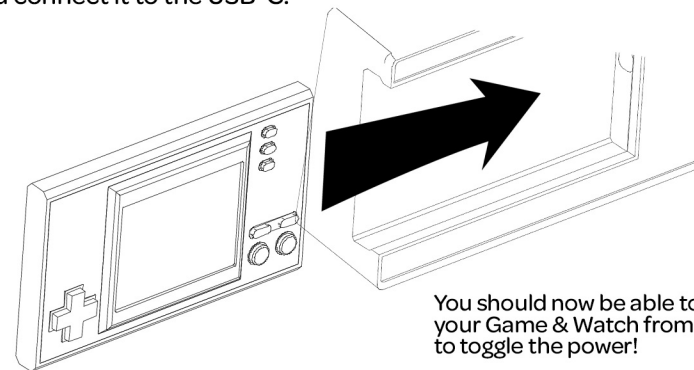

You should now be able to gently press your Game & Watch from the left side to toggle the power!

Open for instructions

